

**RIGID VINYL CORE PLANKS WITH A TOP LAYER
PARTIALLY DERIVED FROM CASTOR OIL PLANTS**

Product Description

7.09 in. x 48.03 in. /
180mm x 1220mm

Grade Levels

Above Grade / On Grade
/ Below Grade

Installation Method

Floating - Drop and Lock

KEY INSTALLATION CONSIDERATIONS

Allure Botanicals is intended for interior use only and is suitable for above grade, on grade, and below grade applications. DO NOT install in any outside areas, sunrooms/solariums, saunas, seasonal porches, camping trailers, boats, RVs, 3-season rooms, lanais, rooms that are prone to flooding, or rooms or homes that are not temperature-controlled.

Allure Botanicals is a floating floor and should be allowed to expand and contract freely. It must not be glued, nailed, or fastened to the subfloor in any way. Permanent cabinets, vanities, islands and similar items should be installed first. Then, install Allure Botanicals around them, leaving the proper expansion space. Allure Botanicals can be installed under vanities with legs. Allure Botanicals can be installed under toilets; leave proper expansion space around flange and use a premium waterproof 100% silicone flexible sealant. Do not anchor toilet through the material.

Allure Botanicals is a waterproof floating floor, but it should not be used to seal an existing floor from moisture. It cannot inhibit the growth of mold or prevent structural problems associated with, or caused by flooding, excessive moisture, alkalis in the subfloor, or conditions arising from hydrostatic pressure. Regardless of location, always remove standing water, urine and other liquids promptly. Job site moisture issues should be addressed and corrected prior to installation. Fill expansion spaces around potential wet areas only with a premium waterproof 100% silicone flexible sealant.

Long-term exposure to direct sunlight can potentially damage Allure Botanicals, causing it to discolor, fade, or buckle. Protect Allure Botanicals from exposure to direct sunlight via the use of window-treatments or UV-tinting on windows.

If the flooring is to be installed by a third party, then it is suggested that the homeowner be present during the installation for consultation/direction. The owner and installer should discuss installation and layout to maximize satisfaction. If this is not possible, consultation should occur prior to installation. The owner/installer assumes all responsibility for quality of completed installation.

Tools for Installation:

- Utility Knife Straight Edge
- Measuring Tape ¼" (6mm) Spacers
- Pencils Profiled Tapping Block
- Pull Bar Eye Protection
- Soft-Faced Hammer Broom
- Felt or Nylon Pads Work Gloves
- Handsaw NIOSH or OSHA Approved Dust Mask

Optional: Jig Saw, Table Saw, Miter Saw, Circular Saw, Hole Saw, Moisture Meter (wood, concrete, or both)*

*Tools may be available for rent at your local home improvement store.

Overlap Allowance	Order 10% more flooring than square footage of install area(s) to account for cuttings and waste
Subfloor Flatness Tolerances	¼" in 10ft., Slope not more than 1" per 6 ft. (6mm in 3m, Slope not more than 25mm per 1.8m) No abrupt height differences. High spots should be sanded or ground down and low areas should be filled
Vapor Barrier (6 mil polyfilm)	Not Required
Should Underlayment (pad) be used?	No - Allure Botanicals includes a pre-attached sound-mitigating pad. Do not use any additional sound suppression underlayment or padding, as doing so will void the Allure Botanicals Limited Warranty
Acclimation Requirements	Residential - Not Required Light Commercial - 48 Hours
Transition Requirements	Required when installing Allure Botanicals in a room or area that is larger than 100 lineal ft. (30.5m) in any direction
Installation On Stairs or Vertical Surfaces (walls)	VOIDS WARRANTY
Installation Over Existing Ceramic Tile Floors	Filling of Grout Lines - Not Required (Follow Subfloor Flatness Tolerances)
Glue Down Installation	VOIDS WARRANTY
Subfloor RH/MVER Recommendations	85% Relative Humidity / 8 lbs. MVER (Moisture Vapor Emission Rating)
Radiant Heat	Approved - See page 3
3-Season/Non-Climature Controlled Environments	VOIDS WARRANTY
Expansion Space Requirements	¼" (6mm) around perimeter walls & heavy fixed objects such as cabinetry or baths
Required Interior Environmental Conditions	50°F-100°F (10°C-38°C) / 40% - 60% RH
Definition of "Waterproof"	Structural integrity of Allure Botanicals flooring will not degrade due to contact with moisture/water



PRE-INSTALLATION BASICS

Please contact our Customer Service Department at (866) 843-8453 if you have any questions or concerns regarding the installation and/or care & maintenance of Allure Botanicals flooring, so as to ensure that you do not engage in any actions that might void the Allure Botanicals Limited Warranty.

The installation of Allure Botanicals vinyl plank flooring does not generally require acclimation in residential applications if the product is stored properly. If the product is subject to extreme hot or cold temperatures prior to installation, allow the product to acclimate to room temperature. The room of installation must be between 50°F & 100°F (10°C & 38°C). The HVAC system **must** be on and functional before, during and after installation.

Product should be stored horizontally in a dry area away from direct sunlight. Do not leave next to heating or cooling ducts. All work involving water must be completed well in advance of the installation of Allure Botanicals. Do not store flooring in uncontrolled environmental conditions. For example, garages and exterior patios are not acceptable areas to store flooring. Flooring stored on a concrete slab should be elevated at least 4" (10.2cm) to allow air circulation under cartons. Ensure that all trades have been completed, including; drywall, plasterwork, plumbing, painting, etc.

Locate the run number on the short end of each carton and verify that all of the material for your job is from the same run. Minor shade variations within the same run number contribute to the natural look of Allure Botanicals. To minimize noticeable shade variation, avoid installing material from different runs across large expanses. The run number is the eight-digit number separated by decimal points beginning with the two-digit day, then the two-digit month, and finally the four-digit year.

Run Number
10.05.2017
Day.Month.Year

Randomly pull planks from three different cartons to ensure good color and shade mixture. Carefully inspect each plank for visual defects prior to installation. Do not install damaged planks.

Safety and Health Precautions

Power tools can be dangerous. Operate in strict accordance with manufacturer's operating instructions and safety precautions. Unsafe and improper use can cause serious injuries. Avoid inhalation and exposure to airborne particles by wearing personal protective equipment, including: NIOSH or OSHA approved dust masks, safety goggles and work gloves.

JOB SITE EVALUATION

Prior to installation, the homeowner or installer must ensure that job site conditions (including subfloor/substrate, ambient temperature and relative humidity) will not negatively affect the floor. The manufacturer is not responsible for damages associated with improper installation or poor site conditions.

Moisture

Test all concrete subfloors for moisture content and document the results. Visual checks are not reliable. While Allure Botanicals vinyl plank flooring is waterproof, moisture must still be checked in order to protect surrounding structures.

Perform tests at locations around exterior doorways, near walls containing plumbing, near foundation walls and in the center of the room.

Moisture requirements vary by subfloor, as detailed in the sections that follow.

Crawl Spaces

Concrete slab or ground must be dry. Ensure that crawl spaces have open vents year-round to ensure proper air circulation and prevent moisture build-up. The ground in the crawl spaces must be completely covered with a minimum 6-mil vapor barrier. Crawl space clearance between the earth and underside of joists should be no less than 18" (46.0cm) and the perimeter vent area should be equal to 1.5% of the total square footage of the crawl space or as mandated by code.

APPROVED SUBFLOORS

Concrete, Plywood, OSB, Particleboard, Chipboard, Hardwood (Solid, Engineered, Parquet), Tile (Ceramic, Terrazzo, Stone, Asbestos, Peel and Stick), Non-Cushion Sheet Vinyl, Metal, VCT, DRIcore

All subfloor requirements noted below must be met prior to the installation of Allure Botanicals vinyl plank flooring.

GENERAL REQUIREMENTS (ALL SUBFLOORS)

- Must be level to within ¼" in a 10ft. (6mm in a 3m) span; no bumps, low spots, or abrupt height differences. Subfloors should not slope more than 1" per 6ft. (25mm per 1.8m).
- Must be clean: no construction debris, soil, mud or any other objects on or adhering to the floor; if necessary, scrape and sweep away before the installation; no protrusions of nails, debris, or metals should remain.
- Must be free from moisture-related conditions that can damage the installed flooring.
- Be structurally sound without deflection.

CONCRETE SUBFLOORS

- High spots can be removed by grinding; depressions can be filled with patching compound formulated for use in floor installation.
- Cure for at least 90 days (applies to newly-laid concrete slabs).
- Can be either sealed or unsealed.
- Between 7 and 9 alkalinity when performing pH test (ASTM F710).
- Moisture content should meet one of the following criteria:
 - 4% max. when tested using Tramex Concrete Moisture Encounter.
 - Less than 8 pounds per 1000 sq. ft. per 24 hours MVER (Moisture Vapor Emission Rating) when using Calcium Chloride test (ASTM F1869).
 - 85% max. when performing Relative Humidity Testing (ASTM F2170).

WOOD (PLYWOOD, OSB, PARTICLEBOARD, CHIPBOARD, SOLID HARDWOOD, LUAN) SUBFLOORS

- Wood subfloors must be A.P.A approved with a minimum grade of "BB" or "CC". For reference, A.P.A. is the acronym for an organization originally known as the "American Plywood Association", and that is now known as "The Engineered Wood Association".
- Perform moisture tests using a professional "wood flooring" moisture meter in multiple locations. Moisture readings should never exceed 14% for plywood, OSB, particleboard, chipboard, and solid hardwood subfloors. If moisture readings exceed 14%, it should be corrected at the job site before installing Allure Botanicals vinyl plank flooring.

TILE, TERRAZZO, ASBESTOS TILE, RESILIENT TILE, NON-CUSHION SHEET VINYL, AND METAL SUBFLOORS

- Existing floors must be firmly attached to the structural floor.
- Fill in grout lines larger than ¼" (6mm) on ceramic tiles, terrazzo, quarry tiles, and similar floors with a cementitious leveling and patching compound.
- Install over one layer of vinyl only.



APPROVED SUBFLOORS cont.

IN-FLOOR RADIANT HEAT

This product can be installed over radiant heat concrete subfloors. Consult with the radiant heat system manufacturer to ensure that the system is compatible with vinyl flooring.

- Electric and hydro systems are acceptable.
- In-floor radiant components must be a minimum of ½" (12.7mm) below the surface of the concrete slab.
- Floor surface temperature should never exceed 85°F (29°C).
- Heating system should be operational for at least two weeks prior to installation to calibrate temperature settings.
- Flooring cannot be laid directly over radiant heating mats.

NON-APPROVED SUBFLOORS

- Carpeting/Carpet Pad
- Floating Floors
- Parquet Over Concrete
- Eng. Hardwood Over Concrete
- Hardwood Over Concrete
- Cushioned Vinyl Flooring
- Laminate
- Cork
- Sleeper Substrates
- Rubber

Remove the floors noted above and remove old adhesive before installing Allure Botanicals vinyl plank flooring.

CAUTION: If you contemplate the removal of a resilient floor covering structure that contains (or is presumed to contain) asbestos, you must review and comply with all applicable regulations. Do not sand, dry sweep, dry scrape, drill, saw, bead blast, or mechanically chip or pulverize existing resilient flooring, backing, lining felt, asphalt "cut-back" adhesive, or other adhesive. These products may contain asbestos fibers and/or crystalline silica. Avoid creating dust. Inhalation of such dust is a cancer and respiratory tract hazard. Smoking by individuals exposed to asbestos fibers greatly increases the risk of bodily harm. Unless positively certain that the product is a non-asbestos containing material, you must presume it contains asbestos. See "Recommended Work Practices for Removal of Resilient Floor Coverings" (rfci.com) for detailed information and instructions on removing all resilient covering structures.

HELPFUL POINTERS & PREPARING FOR INSTALLATION

- Work area should be well lit. Proper visibility ensures that color is consistent and that visually defective planks are detected and removed. *Subfloor must be clean and free of debris.*
- Undercut door jambs and casings using a handsaw laid flat on a piece of scrap flooring.
- Make sure the profiled edge of the tapping block is secure and flat against the plank before lightly tapping in place with soft-faced hammer. Never use the tapping block (by itself) to hit against the edge of the planks.
- Carefully remove the existing base, shoe molding or thresholds. They can be reused to cover the ¼" (6mm) expansion space around the edge of the room.
- The minimum length of the first and last plank is 8" (20.3cm). If the last plank will be less than 8" (20.3cm), adjust the length of the first plank. The remainder of the last plank can be used as a starter plank on the following rows.
- The minimum end-joint stagger is 8" (20.3cm). Keeping this in mind, vary the distances from end joints row-to-row for a more random and realistic installation.


AVAILABLE MOLDINGS

Select moldings and transitions can be found at your local home improvement store. Follow molding installation instructions for proper installation.

INSTALLATION

INSTALLING FIRST ROW


- 1 Set spacers to allow a minimum space of 1/4" (6mm) around the perimeter of the subfloor for movement or product expansion. Do not remove the spacers until the installation is complete. The expansion space should be covered by molding.

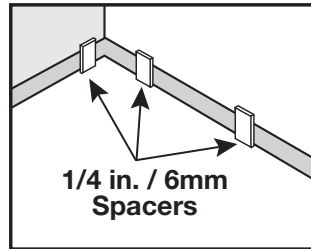

- 2 Measure the length of the room in inches. Divide it by the length of the planks. If the resulting number is less than 8", you will need to cut your first plank accordingly to avoid having planks that are less than 8" on the opposite end of the room.


Note: To cut a plank, simply measure and mark the plank. Then, use a straight edge and utility knife to score and snap. You will also need to back-cut the under pad on the bottom of the plank. If you have difficulty with this method, you can use a jig saw, circular saw or miter saw.

- 3 Installation should start in a left-hand corner and proceed from the wall with the tongue facing the wall. Position the first plank 6" (15.2cm) from the starting wall but not up against the spacers. The entire row will be moved against the spacers in a later step.

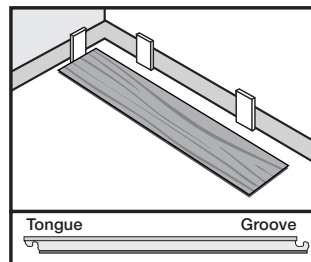


- 4 Interlock the next plank at the end joint of the first plank by inserting the tongue into the groove of the first plank.

Square the joints by tapping the long edge with the profiled tapping block and soft-faced hammer. Next, lightly tap down on top of the plank at the short joint with the soft-faced hammer. Continue this method to finish the first row.

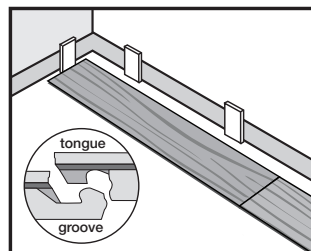

Cut the last piece of the row to fit, and allow for the 1/4" (6mm) expansion space (if you have not already done so). Install as above.

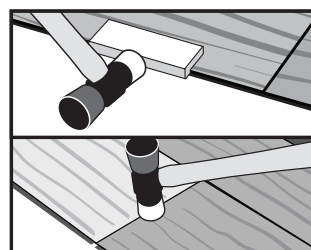




INSTALLING SECOND & REMAINING ROWS

- 5 Cut the first plank of the second row to two-thirds its length or make sure there will be at least an 8" (20.3cm) stagger between end joints. Angle the long tongue edge of the plank into the long groove edge of the first plank. Drop and lock the end joints together.


Make sure there are no gaps and, if necessary, tap along the long groove edge using the soft-faced hammer and profiled tapping block to ensure a tight fit.

Do not tap the short end into place if the long joint is not properly engaged, as doing so can cause damage to the tongue and groove.

Note: When starting a new row, you can use the cut piece from the previous row, as long as it is more than 8" (20.3cm) and the stagger between seams is still greater than 8" (20.3cm).

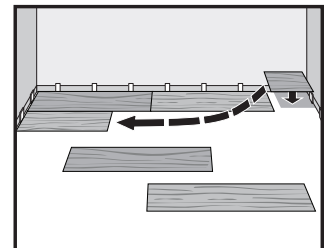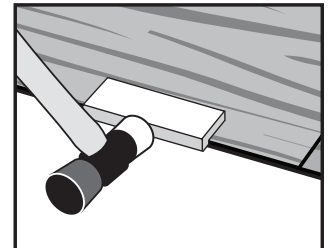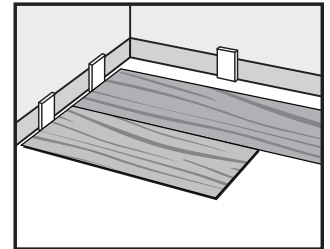


- 6 Attach the second plank of the second row by connecting the long side to the first row and sliding it up to the short end of the first plank of the second row. Check that the long joints of the planks are properly engaged and then press the short joint into place with your fingers.

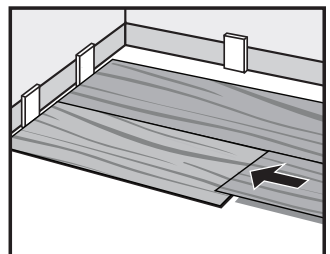


INSTALLATION cont.

INSTALLING SECOND & REMAINING ROW cont.

- 7** Continue to square the joints by tapping the long edge with the profiled tapping block and soft-faced hammer. Then, lightly tap down on top of the plank at the short joint with the soft-faced hammer. Continue installing the remainder of the row in this fashion.

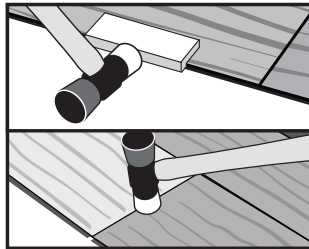


- 8** After installing the last piece of the second row, slide the entire assembly against the spacers on the starting wall, maintaining the required 1/4" (6mm) expansion space.

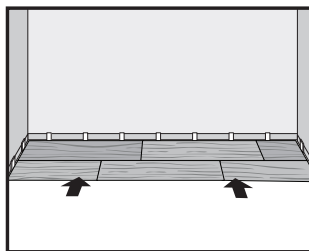

- 9** Install remaining rows, one row after the other, and maintain the required 8" (20.3cm) stagger throughout the install. Tap and square each plank as instructed in step 7.


INSTALLING THE LAST ROW

- 10** Most often the entire length of the last row will need to be cut so that it is narrow enough to fit the remaining space. Cut the first plank of the last row to length (if necessary to follow stagger pattern). Place directly on top of the previously installed row. Then, take another plank and place it against the wall on top of the plank to be cut for width. Mark the plank (length-wise), cut to size. Remember to allow for the 1/4" (6mm) expansion space against fixed objects.

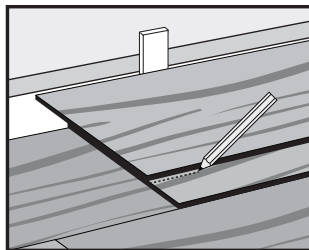


- 11** Install the plank with the cut side always facing the wall. Use a pull bar to lock the long edges together. Do not use the pull bar on the short edges.

Continue to cut and install remainder of the planks in the last row.

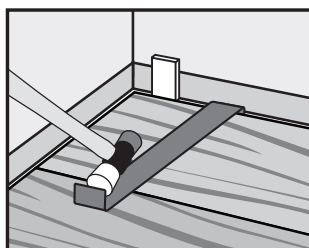


FITTING AROUND IRREGULARLY SHAPED OBJECTS

Make a template to fit around pipes or irregular shaped objects. Place the pattern upon the plank and trace. Cut along the trace lines using a utility knife or jig saw, and lay plank. Alternatively, a hole saw can be used when cutting planks that are to fit around pipes.

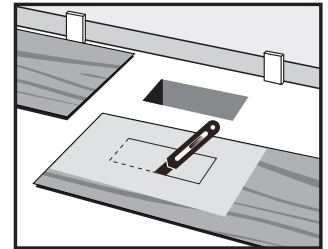

Note: Be sure to leave a minimum of 1/4" (6mm) expansion space around all fixed objects, cabinetry, and metal door jambs.

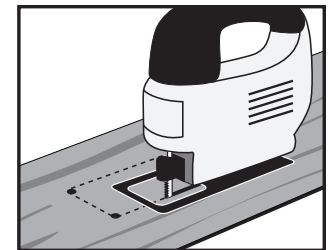

FINISHING THE JOB

Remove spacers. Cover expansion spaces with quarter round or other trim, being sure not to trap or pin down the floor. Nails should go into wall, not the floor.

Fill any expansion spaces around potentially wet areas (such as refrigerators, tubs, etc.) with premium, waterproof 100% silicone flexible sealant.

Remember, the use of coordinating T-Molds is required when installing Allure Botanicals in a room or area that is larger than 100 lineal feet (30.5 meters) in any direction, so that the floor is separated into sections that are no larger than 100ft. x 100ft. (30.5 meters x 30.5 meters) per section.

Save and protect any leftover planks. Do not discard, as they are color-matched (by dye-lot) to your floor. They can be used in the event you need to replace a plank.

CARE & MAINTENANCE

DAILY MAINTENANCE

- Regularly sweep, dust, damp mop, or vacuum (without beater bar) your floor to remove any particles that could cause abrasions or scratches to appear on your floor.
- Use a damp mop to remove spots and soil. Use any pH neutral floor cleaner.
- For lightly soiled areas, clean with potable water.
- When the cleaning cloth/mop becomes soiled, rinse or replace it with a clean one. Following up with a clean, dry cloth will remove residual streak-marks and spots.
- Avoid spills of acidic products (juice, soft drinks, wine, etc.) on the floor. Clean spots immediately.
- Promptly remove any standing water, pet urine or other liquids.
- Avoid spills of paints, dyes, or harsh chemicals.

- **DO NOT** use a steam cleaner.
- **DO NOT** vacuum with a beater bar or power rotary brush head.
- **DO NOT** use any cleaning agents containing wax, oil or polish. Leftover residue will form a dull film.
- **DO NOT** use steel wool or scouring pad, as they will scratch the floor.
- **DO NOT** use any dust cleaners, as they may cause your floor to become slick or damage the finish.
- **DO NOT** use vinegar.
- **DO NOT** use any all-purpose or multi-purpose cleaners.
- **DO NOT** use wet sweeper pads. Dry sweeper pads can be used.

FLOOR REPAIR

- Use a melamine pad to remove scuffs.
- Deep scratches may require the replacement of planks. Please contact (866) 843-8453 for assistance, if needed.

PREVENTATIVE MAINTENANCE

- Protect your floor when using a dolly to move furniture or appliances. Protective sheets and/or plywood may be needed. Never slide or roll heavy furniture or appliances across the floor.
- Use flat floor protectors (nylon or felt) on all furniture legs. Periodically clean protectors to remove grit that may become embedded and cause scratching.
- Minimize abrasive material and dirt by placing mats on both sides of exterior doors and by using area rugs in high-traffic areas.
- Use protective mats beneath rolling chairs and keep furniture casters clean.
- Use NON-RUBBER backed mats that are labeled "colorfast" by the manufacturer. Non-staining, vinyl-backed mats or woven rugs should be used at all entrances to avoid discoloration from asphalt driveways and to prevent dirt and grit from being tracked onto your floor. Rubber and latex-backed mats use a chemical (antioxidant) to keep the backing from becoming brittle; it is this chemical that can permanently stain your floor.
- We recommend the use of a hard surface (non-studded), non-rubber chair mat to protect your floor from office chairs with casters. Light, rolling furniture should be outfitted with broad-surface, non-staining casters that have been engineered for hard surface floors. Such casters should be a minimum of 1" (2.5cm) wide and at least 2" (5.1cm) in diameter.
- Keep pets' nails trimmed.
- Remove shoes with cleats, spikes or exceptionally pointy heels before walking on the floor.

LIMITED WARRANTY

PRODUCTS & COVERAGE

Warranty Registration is available online at warranty.halsteadintl.com. Halstead New England warrants that its Allure Botanicals flooring will be free from manufacturing defects and, under normal use and maintenance, will not wear, fade or stain resulting in loss of original pattern and color, and the structural integrity of the flooring itself will not be materially impaired by water damage as hereafter defined, for a specified length of time from the date of purchase as set forth in the Warranty Coverage chart on the right. This Limited Warranty only applies provided the flooring covered by this warranty is installed and maintained according to the Allure Botanicals Installation Instructions.

PRE-INSTALLATION

Halstead New England warrants that its flooring is free of visual defects. You and/or your installer should carefully inspect each piece before installation. Any pieces that appear to have defects should not be installed. Halstead New England will not be responsible for any claim for flooring installed with visual defects.

INSTALLATION

This Limited Warranty covers materials only, provided that such flooring is installed according to the Allure Botanicals Installation Instructions. These instructions are revised periodically and floors must be installed according to the current instructions at the time of installation. Please check Wayfair.com for the current Allure Botanicals Installation Instructions.

REPLACEMENT/REPAIRS

Halstead New England reserves the right to repair any flooring and/or to use its own source to obtain an installer for replacement flooring. If Halstead New England repairs or replaces any flooring as a result of a warranty claim, you will be required to clear, at your own expense, any items placed over the affected areas subsequent to the original installation. In the event that Halstead New England repairs or replaces any flooring covered under this Limited Warranty, this Limited Warranty shall remain in effect with respect to such flooring for a period limited to the remaining eligible duration of the original Limited Warranty.

TERMS FOR WARRANTY

If a defect covered by this Limited Warranty is found within the warranty period and reported in writing to Halstead New England, then Halstead New England will supply new flooring material of similar color, pattern and quality to replace the defective area.

In case of questions regarding the terms of this Limited Warranty, contact Halstead New England Customer Service at (866) 843-8453. Halstead New England reserves the right to inspect any flooring, request samples, secure photographs or any other information that may be required to ascertain the nature of any claim under this Limited Warranty.

EXCLUSIONS

The following are not covered by this Limited Warranty:

- Dissatisfaction or damage due to improper installation or maintenance, including use of improper cleaning solutions or finishes, unevenness or irregularities. Refer to the Allure Botanicals Installation Instructions for more details.
- Damage caused by fire, burns, abuse, flooding, spills, scratches, abrasive scouring pads, scuffing, staining, construction or installation.
- Damage caused by vacuum cleaner beater bar, indentations or damage caused by spiked heeled shoes, improper rolling loads, caster wheels, chairs or other furniture without proper floor protectors and cuts from sharp objects.
- Changes in color or sheen from exposure to sunlight or due to use of rubber-backed mats.
- Exterior applications.
- Loss of gloss.
- Minor shading, color or texture differences between samples or printed color photographs or illustrations and delivered product.

WARRANTY	Limited Lifetime Residential 5 year Light Commercial
WARRANTY COVERAGE	Manufacturing Defect, Wear, Fade, Stain, and Water Damage*

*DEFINITIONS / TO BE COVERED:

Wear: must be through the wear layer to the degree that the printed pattern is affected or altered.

Fade: must be to the degree that the floor is permanently discolored.

Stain: must be from normal household cleaning agents, chemicals or routine care & maintenance.

Water Damage: covers structural-integrity damage to the flooring itself after water exposure in standard conditions (does not cover flooding).

- Flooring sold as irregulars or trial grade materials or "as is".
- This flooring should not be used to seal an existing floor from moisture. It is a floating floor which is waterproof, but this flooring cannot inhibit the growth of mold or mildew nor prevent problems associated with or caused by flooding, excessive moisture or alkalis in the subfloor or conditions arising from hydrostatic pressure.
- This Limited Warranty is void if, prior to installation in light commercial applications, this flooring is not acclimated to room temperature (between 50°F and 100°F / 10°C and 38°C) at the job site for a minimum of 48 hours and, if post-installation, such flooring is not continuously maintained at such temperatures.
- Only installation techniques described in the Allure Botanicals Installation Instructions are warranted. Halstead New England does not warrant Allure Botanicals installations involving custom cutting, such as 45-degree mitered corners and serpentine edges. Halstead New England does not warrant Allure Botanicals installations in which the flooring is adhered (glued or nailed) to the subfloor, as Allure Botanicals is a floating floor.
- Loss due to loss of time, inconvenience, incidental expenses (such as telephone calls, labor and/or materials) incurred in the removal or re-installation of the affected material, and any other incidental or consequential damages.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so that the above limitations and exclusions may not apply. Your Limited Warranty gives you specific legal rights, and you may have other legal rights, which vary from state to state and province to province.

This Limited Warranty is in lieu of any other warranties, express or implied. Please keep your receipt. Halstead New England requires a valid proof of purchase in the form of sales receipt, invoice, or statement, which shows the date, product and location purchased. *Original receipts are prone to fading over time. We suggest that you make a photocopy or scan your receipt for future warranty purposes.*

WARRANTY OWNER

This Limited Warranty applies only to the original purchaser and the original installation site and is not transferable and, with respect to the residential warranty, applies only to a resident homeowner.

Claims under this Limited Warranty must be made to the following address:

Allure Botanicals Warranty Department
Halstead New England
119 Thomas Street
Calhoun, GA 30701